




AIR INTAKE KIT
2012-14 Fiat 500 Abarth
PART # NF.6501

INSTALLATION INSTRUCTIONS

- PART LIST:**
- | | | |
|--------------------|--------------------------|---------------------------|
| 1 - Silicone Hose | 1 - Aluminum Intake Tube | 1 - Air Filter |
| 2 - #32 hose Clamp | 2 - Vent Line Connector | 1 - M6 x 40mm Flange Bolt |
| 2 - Wire Tie | 1 - 15" x 1/2" Hose | 1 - Vinyl Cap |
| 1- Plastic Union | | |

- TOOLS REQUIRED:**
- | | | |
|-------------------------|--------------------|-----------------|
| 1 - 10 mm Socket | 1 - 8mm Nut Driver | 1 - Screwdriver |
| 1 - Spring Clamp Pliers | | |

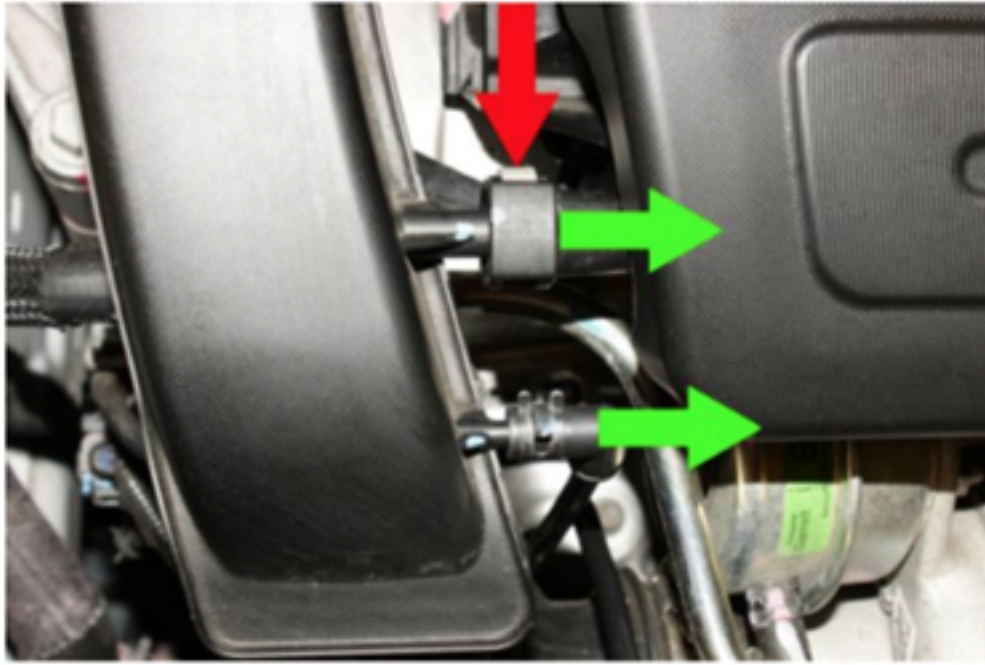

1. Disconnect the (2) vent lines attached to the turbo inlet pipe.



2. Loosen hose clamps at turbo and air filter box then remove turbo inlet pipe.



3. Using a screwdriver disconnect inlet duct from air filter box.



4. Lift air filter box off rubber mounts to remove.



5. Disconnect valve cover breather hose.



6. Install the (2) vent line fittings and hose clamp onto silicone hose then attach to turbo.



7. Using 10 mm socket, unbolt oil filler support bracket.



8. Install hose clamp onto silicone hose, insert supplied intake pipe into hose then mount on top of oil filler support bracket using supplied M10x40mm bolt.



9. Attach vent lines and tighten hose clamps.



10. Attach supplied plastic union and 1/2" hose to original valve cover breather hose from air filter box.



11. Route vent hose as pictured and wire tie to hard plastic vent line as pictured.



12. Cap port on air filter box using supplied vinyl cap.



13. Unscrew air filter lid and remove filter.



14. Install lower air filter box onto rubber mounts making sure vent hose is not being pinched off.



15. Connect front air intake duct.



16. Install NEUF filter and original air filter box lid.



17. Re-attach breather hose support to air box lid.

18. Double check complete installation.

©Copyright 2013 NEUSPEED® All rights reserved.
Reproduction in whole or in part prohibited.
DOC.NF.2201 Rev. 11.15.2013